

SUPPLEMENT TO

SW[®]-48 F

**PARTS CATALOGUE
NO. 180 1046**

**TO COVER MAJOR CHANGES ON
VEHICLES BEARING SERIAL NUMBER
SW 48 - 8254 F AND UP**



1952

1953


1954

1955

1956

SW-48F

Section 00/2	Add		600 0136 00	Cleat (for both tracks)
Section 03/2	Add		603 0429 00	Spring
	Add		603 0422 00	Chain
Section 06/2	#4	use	606 0242 00	Plate - steering lever
Section 12/2	Add		661 2055 00	Pan - oil
	Add		108 0003 00	Cock - drain (oil pan)
	Add		107 3001 00	Hose - paragas (oil pan)
	Add		108 8004 00	Clamp - hose (oil pan hose)
	Add		114 0990 00	Kit - remote filter cover
	Add		114 0991 00	Kit - remote filter support
	Add		110 7036 00	Motor (windshield washer)
	Add		122 0001 00	Filter - oil
	Add		110 7038 00	Jar - windshield washer
	Add		110 7039 00	Bracket - windshield washer jar
	Add		110 7040 00	Filter - windshield washer jar
	Add		110 7037 00	Jet - windshield washer
	Add		110 7041 00	Cap - windshield washer jar
	Add		107 6008 00	Hose - windshield washer (pump to jet) (multiple 12")
	Add		107 6007 00	Hose - windshield washer jar (multiple 12")
	Add		107 6007 00	Hose - windshield washer (pump to jar (multiple 12"))
Section 13/2	#5	use	661 3007 00	Gauge - fuel
Section 14/2	#4	use	614 0138 00	Support - muffler
Section 16/2	#5	use	617 1423 00	Shroud
	#10	use	108 0012 00	Plug (radiator)
	#26	use	661 6023 00	Blower - power defroster
	Add		616 0166 00	Tube - drain cock extension
Section 17/2	Add		617 1422 00	Baffle - front
	Add		617 1412 00	Protector - battery heat
	Add		114 0933 00	Guide - rear fender
Section 17/4	Add		617 1429 00	Support - mirror
	Add		114 0972 00	Mirror - rear view
	Add		107 9033 00	Bumper - rubber
	Add		617 1392 00	Stopper - door
Section 25/4	#4	use	625 0259 00	Seat - spring
	#7	use	114 0003 00	Spring - blade
Section 26/10	#6	use	626 0915 00	Tank - oil
	Add		670 1501 00	Support - rubber (spacer) (tank)
Section 26/12	#10	use	626 0903 00	Head - piston
	#11	use	106 0064 00	Ring - back-up
	#12	use	106 0063 00	"O" ring

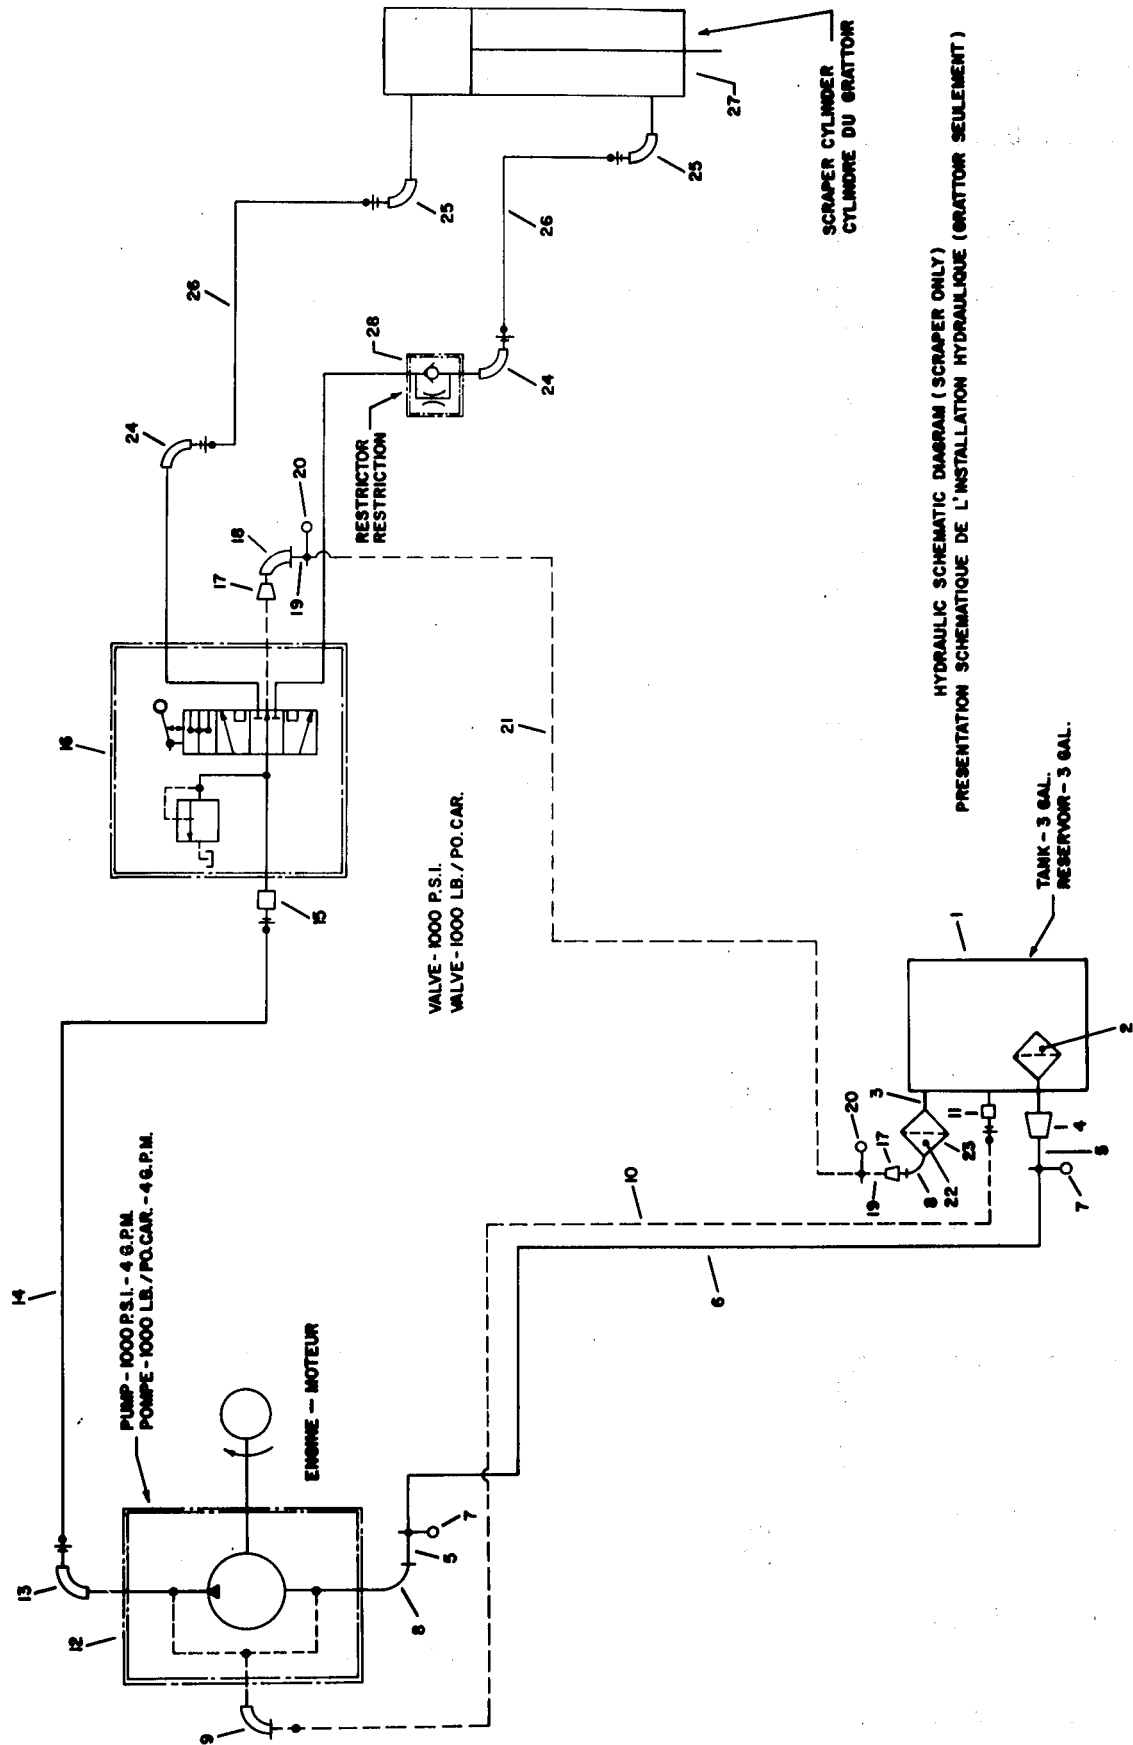

HYDRAULIC SCHEMATIC DIAGRAM (SCRAPER ONLY)
 PRESENTATION SCHEMATIQUE DE L'INSTALLATION HYDRAULIQUE (GRATTOIR SEULEMENT)

HYDRAULIC

SW-48F


HYDRAULIQUE

REF. NO.
NO. REF.PART NO.
NO. PIECE

DESCRIPTION

QTY PER VEHICLE
QTE PAR VEHICULE

1	626 0915 00	Tank-Oil	Réservoir d'huile	1
2	114 0587 00	Strainer - Oil tank	Filtre du réservoir d'huile	1
3	108 7043 00	Nipple - Close	Bague	1
4	108 7076 00	Bushing - Reducing	Douille de réduction	1
5	662 6033 00	Nipple - Half	Bague	2
6	107 3002 00	Hose - Paragas (multiple 12")	Boyau (multiple de 12")	A.R.
7	108 8007 00	Clamp - Hose	Collier de boyau	2
8	108 7042 00	Elbow 90°	Coude 90°	2
9	108 0006 00	Elbow	Coude	1
10	626 0383 00	Hose-L.P. (with fittings) 30" long	Boyau à B.P. (muni de raccords) 30" de long	1
11	108 4035 00	Connector - Male	Raccord	1
12	118 0010 00	Pump - Hydraulic	Pompe hydraulique	1
13	108 5082 00	Elbow - Swivel	Coude	1
14	626 0509 00	Hose - H.P. (with fittings) 54" long.	Boyau à H.P. (muni de raccords) 54" de long	1
15	108 5035 00	Adaptor (Male Pipe)	Raccord	1
16	115 0007 00	Ass'y - Control Valve	Valve hydraulique	1
17	108 5202 00	Bushing - Reducing	Douille de réduction	2
18	108 0014 00	Elbow 90° - Street	Coude 90°	1
19	662 6020 00	Nipple - Half	Bague	2
20	108 8004 00	Clamp - Hose	Collier de boyau	2
21	107 3001 00	Hose - Paragas (Multiple 12")	Boyau (Multiple de 12")	A.R.
22	115 3233 00	Element - Filter	Noyau du Filtre	1
23	115 3232 00	Ass'y - Oil Filter	Filtre (complet)	1
24	108 5101 00	Elbow 90°	Coude 90°	2
25	108 5066 00	Elbow 90°	Coude 90°	2
26	626 0849 00	Hose - H.P. (with fittings) 50" long	Boyau à H.P. (Muni de raccords) 50" de long	2
27	680 0115 00	Ass'y - Cylinder	Cylindre (complet)	1
28	115 3068 00	Restrictor - Check Poppet	Restriction pour billes de retenue	1

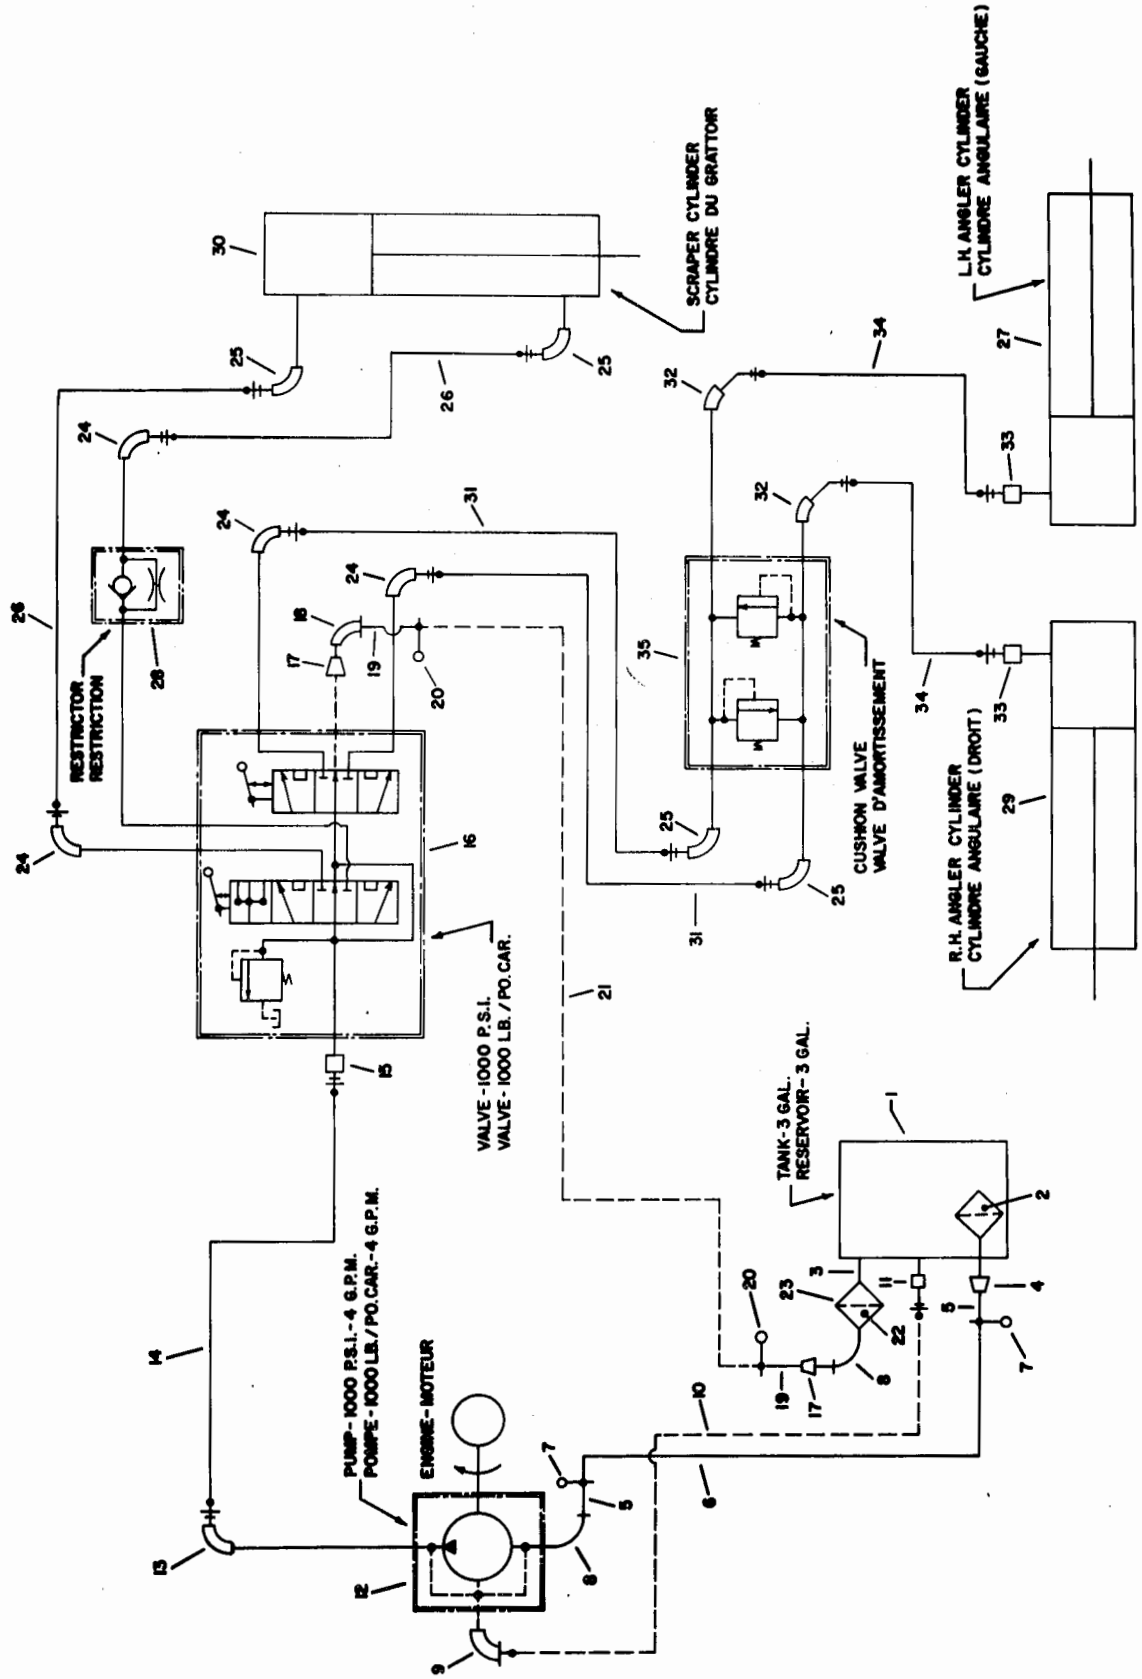

REF. NO. PART NO. DESCRIPTION QTY PER VEHICLE
 NO. REF. NO. PIECE

1	626 0915 00	Tank-oil	Réservoir d'huile	1
2	114 0587 00	Strainer - oil tank	Filter du réservoir d'huile	1
3	108 7043 00	Nipple - close	Bague	1
4	108 7076 00	Bushing - reducing	Douille de réduction	1
5	662 6033 00	Nipple - half	Bague	2
6	107 3002 00	Hose - paragas (multiple 12")	Boyau (multiple de 12")	A.R.
7	108 8007 00	Clamp - hose	Collier de boyau	2
8	108 7042 00	Elbow 90°	Coude 90°	2
9	108 0006 00	Elbow 90°	Coude 90°	1
10	626 0383 00	Hose - L.P. (with fittings) 30" long	Boyau à B.P. (muni de raccords) 30" de longueur	1
11	108 4035 00	Connector - male	Raccord	1
12	118 0010 00	Pump - hydraulic	Pompe hydraulique	1
13	108 5082 00	Elbow - swivel	Coude	1
14	626 0509 00	Hose - H.P. (with fittings) 54" long	Boyau à H.P. (muni de raccords) 54" de longueur	1
15	108 5035 00	Adaptor (male pipe)	Raccord	1
16	115 0008 00	Ass'y - control valve	Valve hydraulique	1
17	108 5202 00	Bushing - reducing	Douille de réduction	2
18	108 0014 00	Elbow 90° - street	Coude 90°	1
19	662 6020 00	Nipple - half	Bague	2
20	108 8004 00	Clamp - hose	Collier de boyau	2
21	107 3001 00	Hose - paragas (multiple 12")	Boyau (multiple de 12")	A.R.
22	115 3233 00	Element - oil filter	Noyau du filtre	1
23	115 3232 00	Ass'y - oil filter	Filtre (complet)	1
24	118 5101 00	Elbow 90°	Coude 90°	4
25	108 5066 00	Elbow 90°	Coude 90°	4
26	626 0849 00	Hose - H.P. (with fittings) 50" long	Boyau à H.P. (muni de raccords) 50" de longueur	2
27	680 0454 00	Ass'y - L.H. angler cyl.	Cylindre angulaire (gauche) (complet)	1
28	115 3068 00	Restrictor - check poppet	Restriction pour billes de retenue	1
29	680 0451 00	Ass'y - R.H. angler cyl.	Cylindre angulaire (de droite) (complet)	1
30	680 0115 00	Ass'y - cylinder	Cylindre (complet)	1
31	626 0854 00	Hose - H.P. (with fittings) 42" long	Boyau à H.P. (muni de raccords) 42" de longueur	2
32	108 5117 00	Elbow 45°	Coude 45°	2
33	108 5173 00	Adaptor (male pipe)	Raccord	2
34	626 0855 00	Hose - H.P. (with fittings) 21" long	Boyau à H.P. (muni de raccords) 21" de longueur	2
35	115 0021 00	Valve - cushion	Valve	1

1/2

○

○

○